


WiFi card installation in Nexus DSC

Please find the following parts in the WiFi card package:

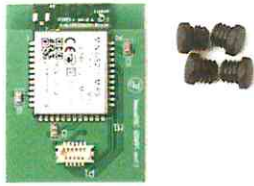

You will find four rubber feet on the back of Nexus DSC:




Please remove the rubber feet – they are not glued. You may not be able to remove them undamaged – the package contains four new ones.

You will find four screws under the feet – please use Philips head screw driver to remove them:




Open Nexus DSC:

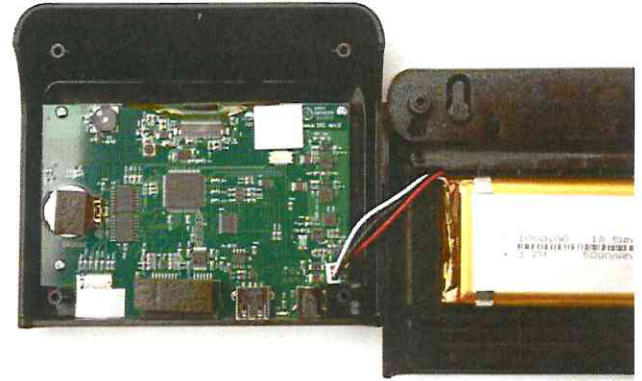

Use tweezers to remove a protective film from the double sided foam tape:



Install the card by pushing it down:

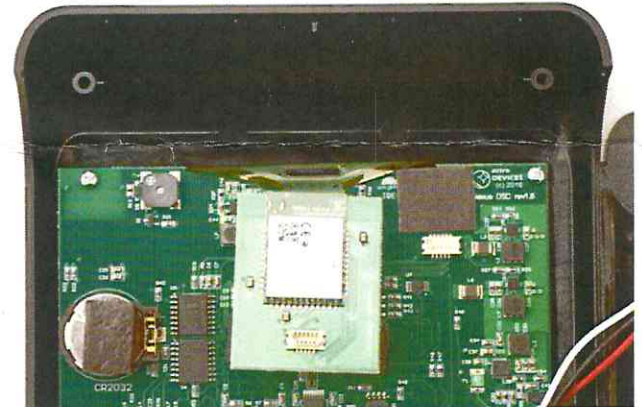

Close the enclosure, put the screws back in but do not over-tighten them. Then put the rubber feet back in.

Enable the WiFi in Settings->WiFi.

DONE